


# HEAVY WALL SEVER - BEVEL TOOL CONFIGURATION

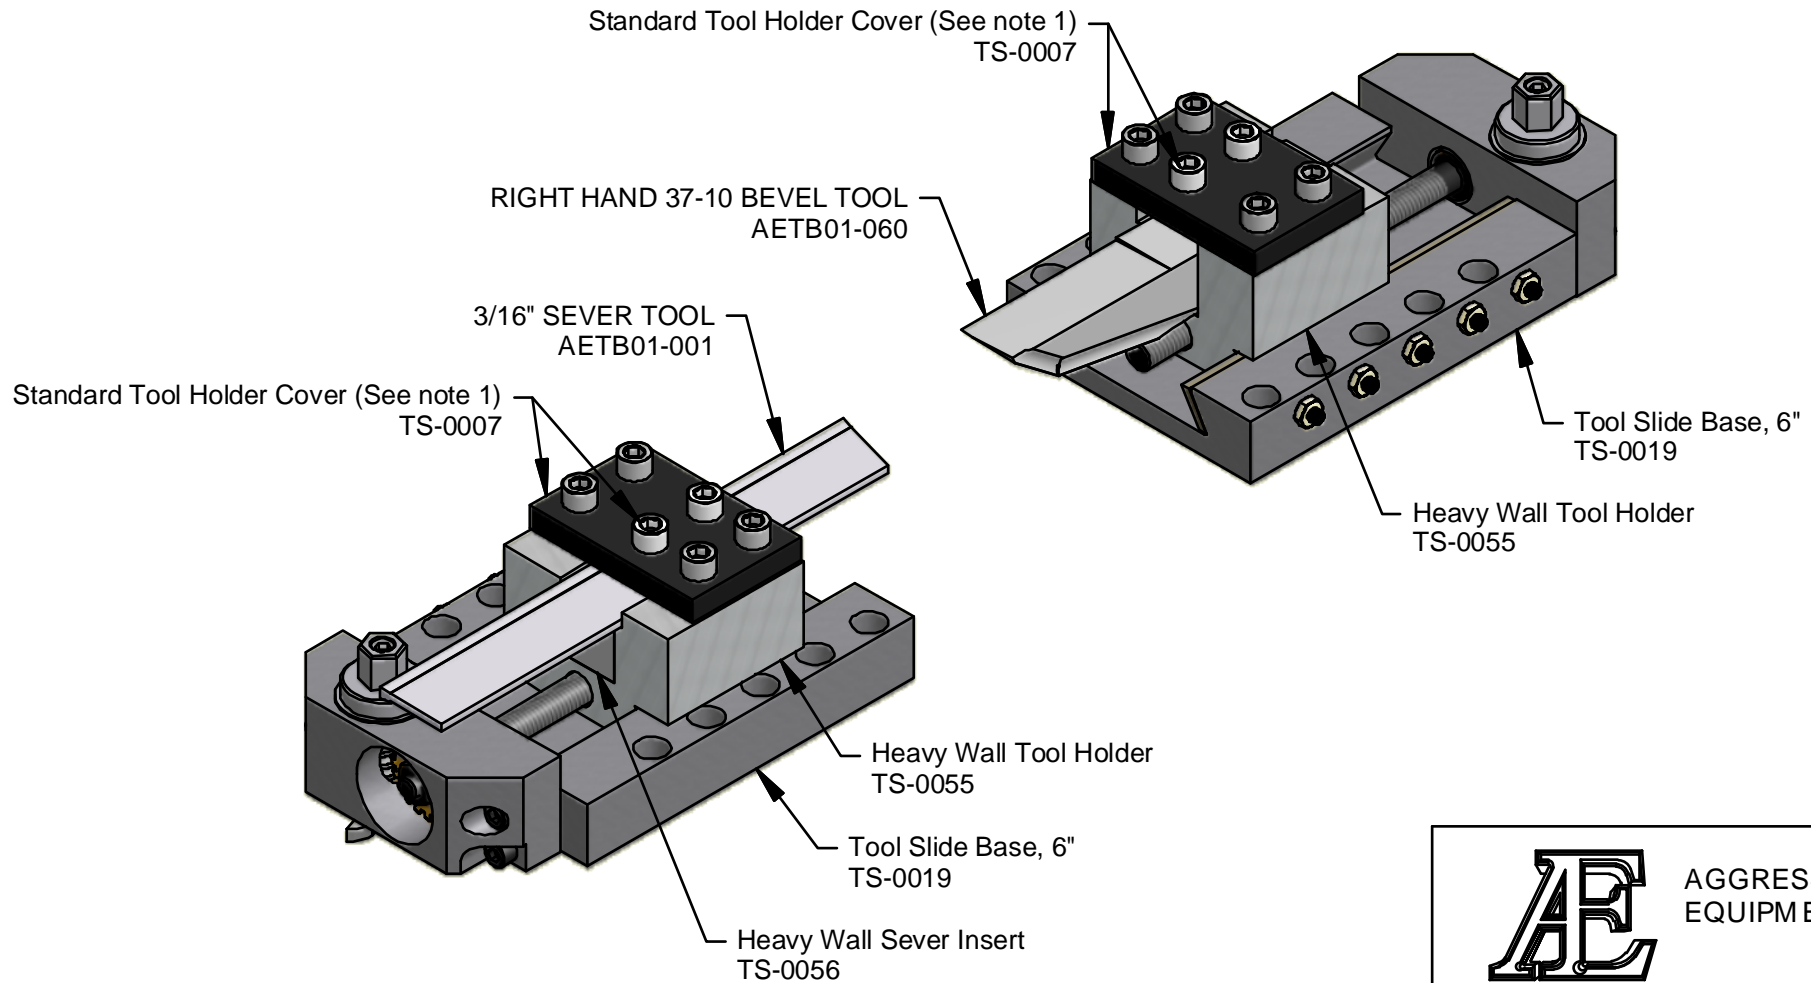

## NOTES:

1. Make sure Tool Holder cover is positioned correctly to achieve necessary contact with tooling.
2. Reference: Portable Pipe Lathe Operations & Maintenance Manual (Rev 2), pages 28 & 29 for a complete parts diagram of Standard Tool Slide Assembly (TS01-6000).



**AGGRESSIVE  
EQUIPMENT**

WEC MACHINING EQUIPMENT, LLC  
ROCK HILL, SOUTH CAROLINA 29730 USA

*SUBSIDIARY OF WEC WELDING AND MACHINING, LLC*

**WESTINGHOUSE PROPRIETARY CLASS 2**

THIS DOCUMENT IS THE PROPERTY OF AND CONTAINS PROPRIETARY INFORMATION OWNED BY WESTINGHOUSE ELECTRIC COMPANY LLC AND/OR ITS SUBSIDIARIES, SUBCONTRACTORS AND SUPPLIERS. IT IS TRANSMITTED TO YOU IN CONFIDENCE AND TRUST, AND YOU AGREE TO TREAT THIS DOCUMENT IN STRICT ACCORDANCE WITH THE TERMS AND CONDITIONS OF THE AGREEMENT UNDER WHICH IT WAS PROVIDED TO YOU.

**DO NOT SCALE DRAWING**